



If the user is not going to use these protocols, it's better (**but not necessary**) to disable these protocols to avoid unnecessary data traffic in the network. It's explained how to do that in the "How to disable the Protocols" slide.

To can use the ETALK protocol, it must be configures, but before must to be enabled. If it is disabled, enable it as is explained in the "How to Enable the Protocols" slide.

**ETALK Configuration :**  
 The unique value to configure in the ETALK Protocol is the PHASE.  
 The recommended value is 2. Set the Phase = 2, and it will work in the 90% of the cases. If you are facing problems because you have a very old Network, change to PHASE = 1.

ETALK configuration RoadMap :  
 How to configure the ETALK (Macintosh) protocol