

OKI


OKI Systèmes (France) S.A.

44-50, Avenue du Général de Gaulle


94246 L'Haÿ Les Roses Cedex

10/11/95


PIECES ML390/391 Elite

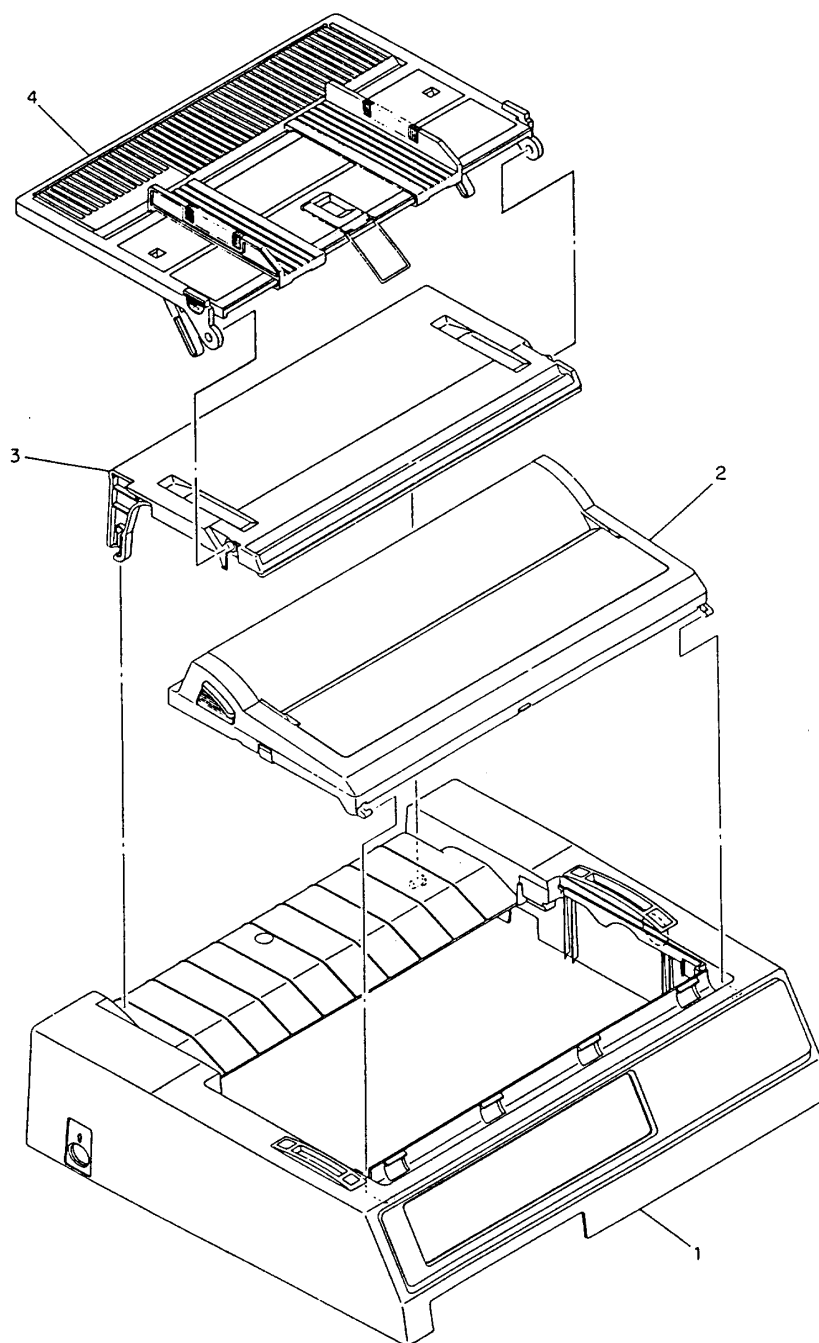


Printer unit (1/5)

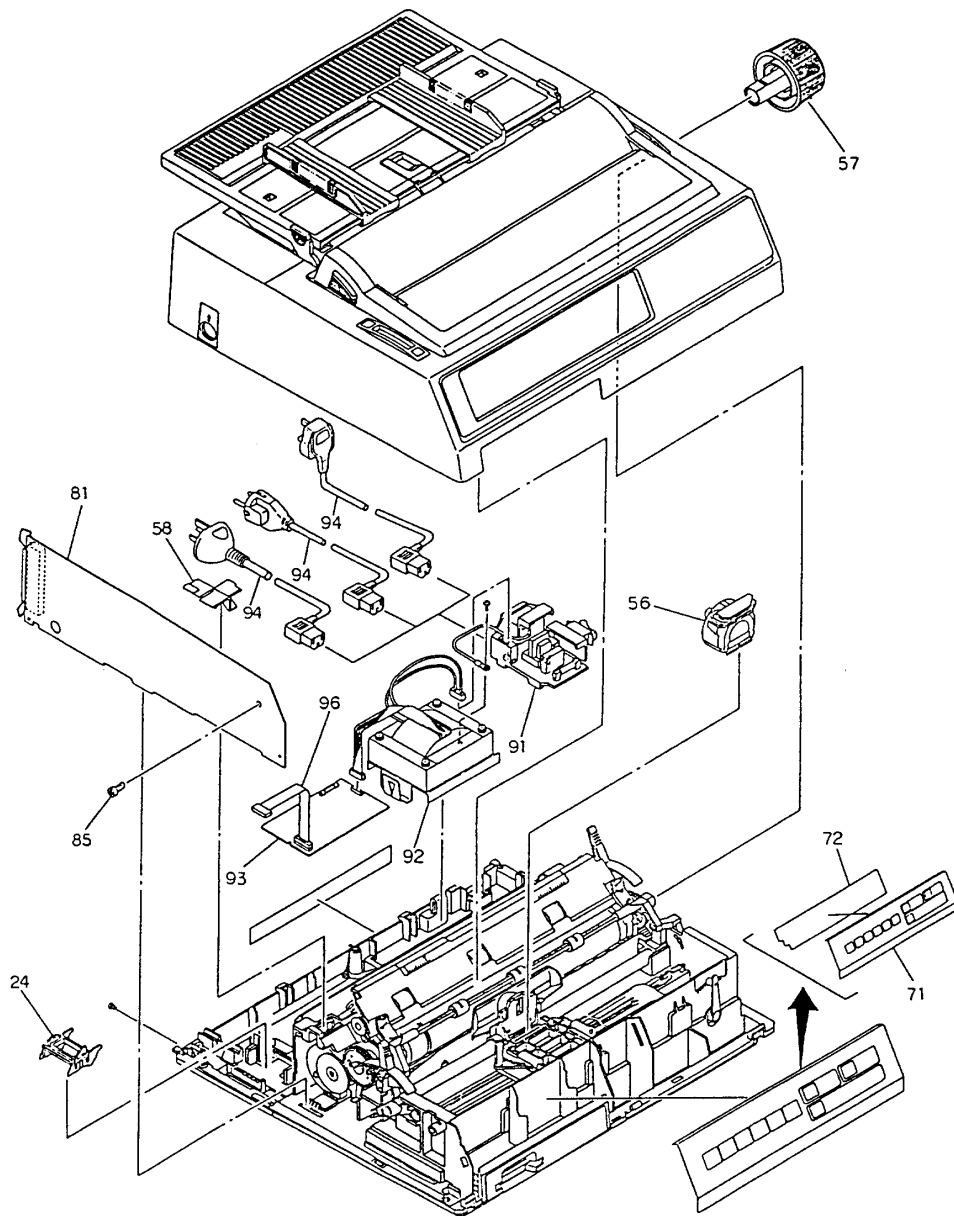


Printer unit (2/5)

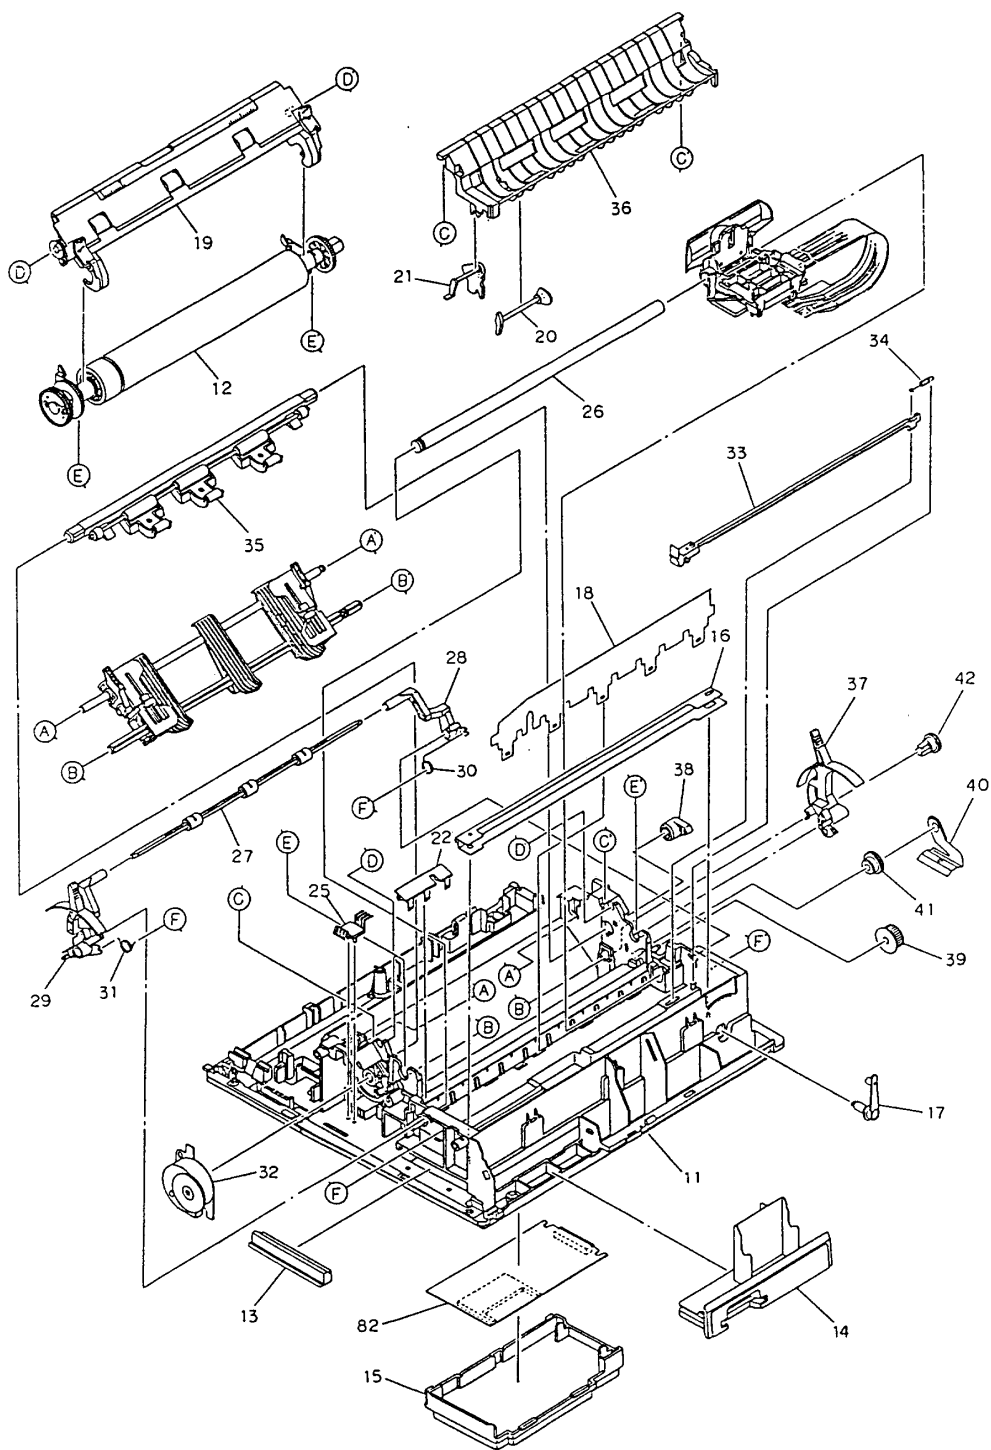


Printer unit (3/5)

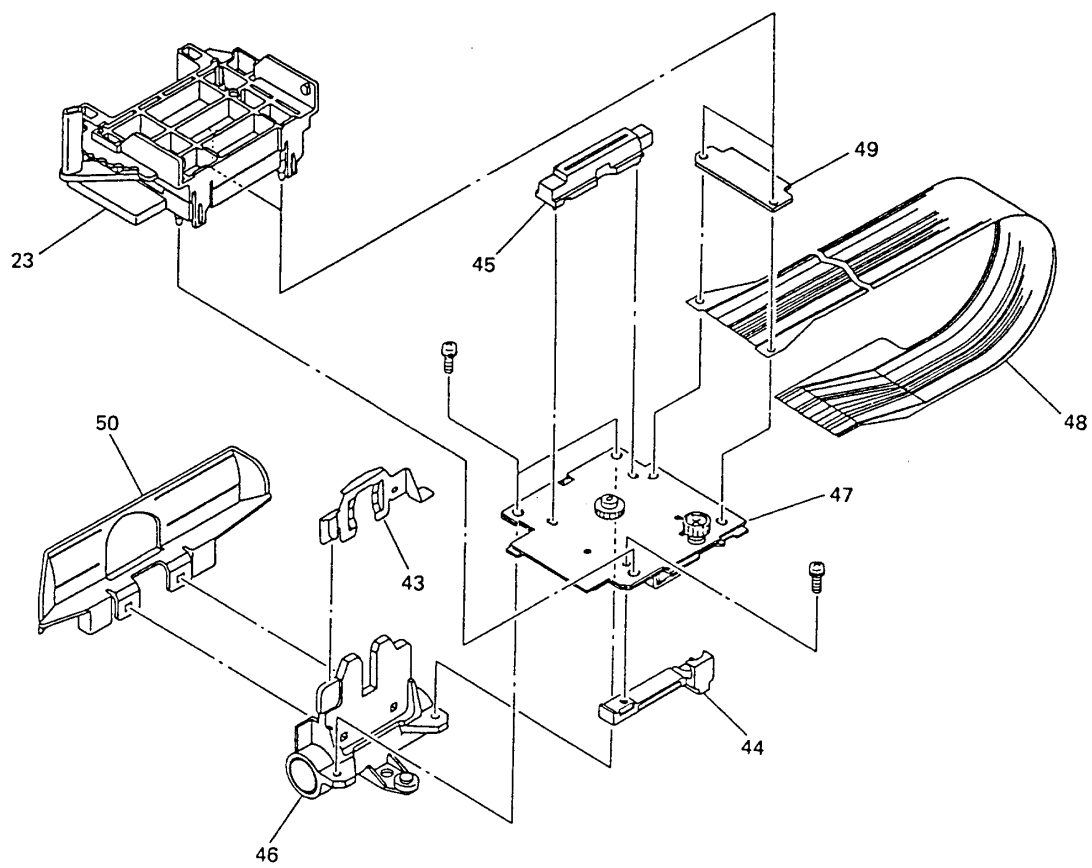



Printer unit (4/5)

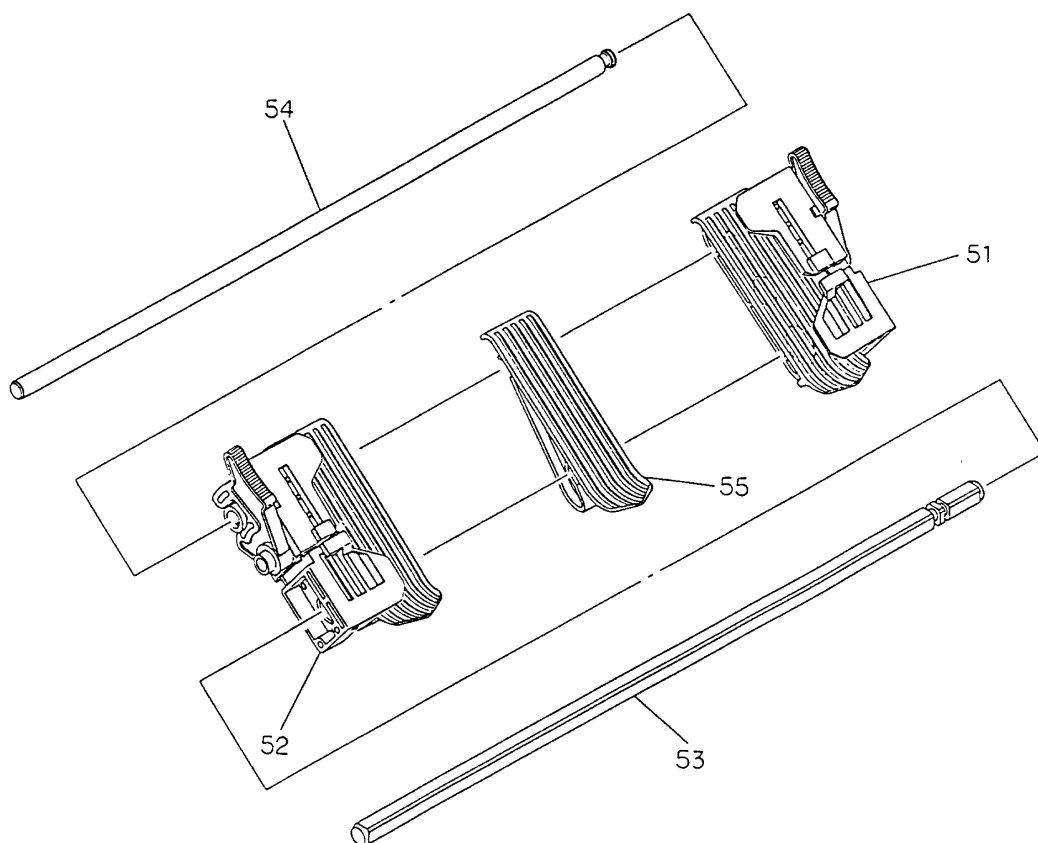

Printer unit (5/5)

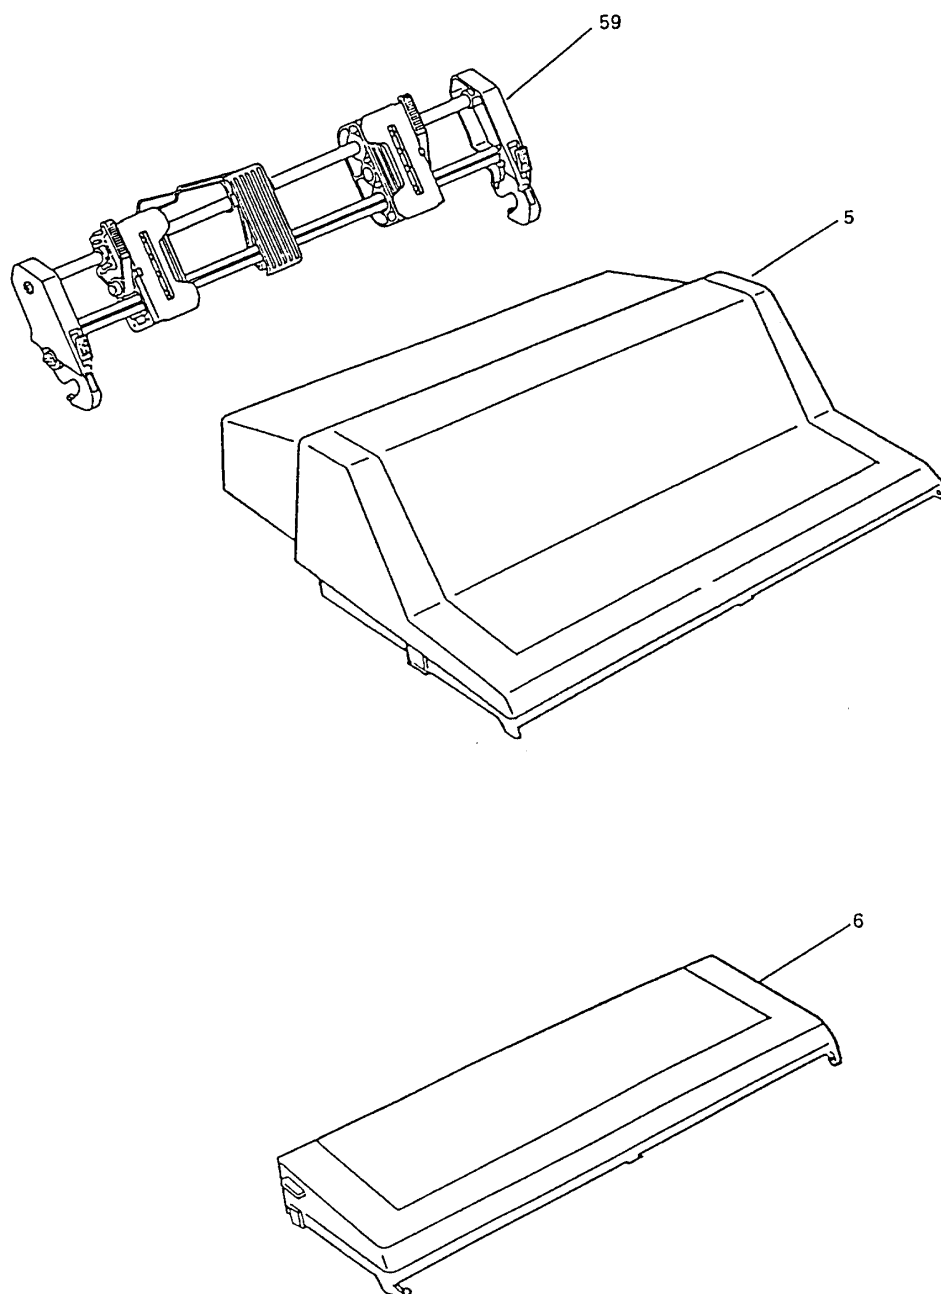

Option parts (1/2)

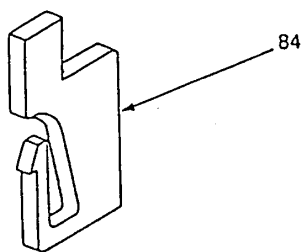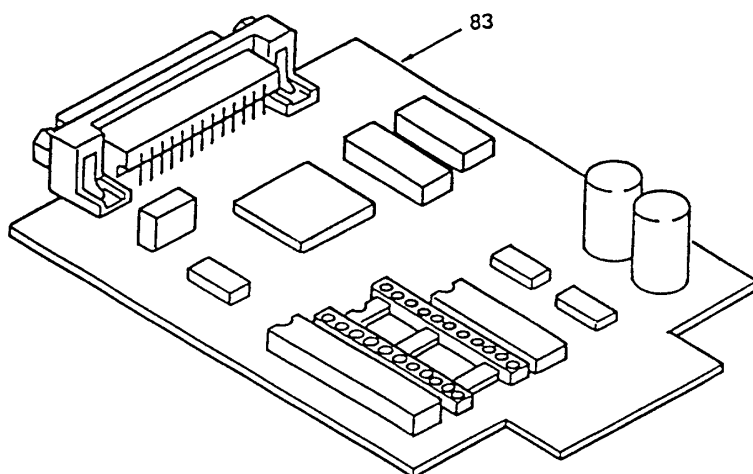

Option parts (2/2)

Spare parts list (1/5)

No.	Item No.	Item name	Q'ty	Q'ty of spare parts/year	Remarks
				500	
	(Cover parts)				
1	1PP4016-6557P27	Middle cover	1	3	390 Elite
	1PP4016-6558P27	Middle cover	1	3	391 Elite
2	2PA4016-6559G1	Access cover assembly	1	3	390 Elite
	2PA4016-6560G1	Access cover assembly	1	3	391 Elite
3	1PP4016-6567P1	Rear cover frame	1	3	390 Elite
	1PP4016-6568P1	Rear cover frame	1	3	391 Elite
4	1PA4016-6569G1	Sheet separator assembly	1	3	390 Elite
	1PA4016-6570G1	Sheet separator assembly	1	3	391 Elite
5	2PP4016-6865G1	Acoustic cover (TR)	1	3	390 Elite option
	2PP4016-6866G1	Acoustic cover (TR)	1	3	391 Elite option
6	2PP4016-6867G1	Acoustic cover (CSF)	1	3	390 Elite option
	2PP4016-6868G1	Acoustic cover (CSF)	1	3	391 Elite option
	(Printer Mechanism)				
11	3PA4025-2802G1	Main frame assembly	1	3	390
	3PA4025-2902G1	Main frame assembly	1	3	391
12	3PA4025-2811G5	Platen assembly	1	3	390
	3PA4025-2811G6	Platen assembly	1	3	391
13	224A1152P0600	AKT-60 (Connection connector)	1	3	
14	2PP4025-2805P1	IC card panel B	1	1	
15	3PA4025-2806G1	Board support cover assembly	1	3	
16	3PP4025-2809P1	Guide rail	1	1	390
	3PP4025-2809P2	Guide rail	1	1	391
17	4PP4025-2810P1	Adjusting cam	1	3	

Spare parts list (2/5)

No.	Item No.	Item name	Q'ty	Q'ty of spare parts/year	Remarks
				500	
18	3PP4025-2819P1	Paper pressure guide	1	3	390 Elite
	3PP4025-3179P1	Paper pressure guide	1	3	391 Elite
19	3PA4025-2963G1	Separator (N) assembly	1	3	390 Elite
	3PA4025-2978G1	Separator (W) assembly	1	3	391 Elite
20	3PP4025-2825P1	Paper end lever (B)	1	3	390 Elite
	3PP4025-2825P2	Paper end lever (B)	1	3	391 Elite
21	3PP4025-2826P1	Sensor lever	1	3	
22	3PP4025-2827P1	Sensor cover	1	3	
23	4PA4025-2832G1	Ribbon drive gear assembly	1	3	
24	4PB4025-3180P1	Cord guide	1	3	
25	3PP4025-2874P1	LF motor interconnect module	1	3	
26	4PP4025-2837P1	Carriage shaft	1	3	390 Elite
	4PP4025-2837P2	Carriage shaft	1	3	391 Elite
27	4PA4025-2838G1	Indicator assembly	1	3	390 Elite
	4PA4025-2838G2	Indicator assembly	1	3	391 Elite
28	3PP4025-2840P1	Bail arm (R)	1	3	
29	2PP4025-2841P1	Bail arm (L)	1	3	
30	4PB4025-2842P1	Bail arm spring (R)	1	5	
31	4PB4025-2843P1	Bail arm spring (L)	1	5	
32	3PB4025-2844P3	LF motor	1	5	
33	3PP4025-2845P1	Space rack	1	5	390 Elite
	3PP4025-2845P2	Space rack	1	5	391 Elite
34	4PB4025-2873P1	Tension spring	1	3	
35	3PA4025-2846G1	Pressure roller assembly (N)	1	3	390 Elite
36	3PA4025-2908G1	Pressure roller assembly (W)	1	3	391 Elite

Spare parts list (3/5)

No.	Item No.	Item name	Q'ty	Q'ty of spare parts/year	Remarks
				500	
36	3PA4025-2853G1	Paper chute assembly (N)	1	3	390 Elite
	3PA4025-2915G1	Paper chute assembly (W)	1	3	391 Elite
37	3PP4025-2852P1	Release lever	1	3	
38	4PP4025-2881P1	Release link	1	3	
39	4PP4025-2866P1	Change gear	1	3	
40	4PP4025-2867P1	Reset spring	1	3	
41	4PP4025-2868P1	Idler gear	1	3	
42	4PP4025-2869P1	Tractor gear	1	3	
43	4PP4025-1048P1	head clamp	1	3	
44	4PB4025-1088P1	Slider	1	3	
45	3PB4025-1241P1	Connector	1	3	
46	4PB4025-2829G2	Carriage frame set	1	3	
47	4YX4025-2052G4	Space motor assembly	1	5	
48	2PU4007-1095P3	Flexible cable	1	10	390 Elite
	2PU4007-1095P4	Flexible cable	1	10	391 Elite
49	4PP4025-2960P1	Contact pressure rubber	1	3	
50	3PP4025-2836P1	Ribbon protector	1	5	
51	4PA4025-2855G1	Tractor frame assembly (R)	1	3	
52	4PA4025-2861G1	Tractor frame assembly (L)	1	3	
53	4PP4025-2864P1	Drive shaft	1	1	390 Elite
	4PP4025-2864P2	Drive shaft	1	1	391 Elite
54	4PP4025-2831P1	Lock shaft	1	1	390 Elite
	4PP4025-2831P2	Lock shaft	1	1	391 Elite
55	3PP4025-2927P1	Sheet guide	1	3	

Spare parts list (4/5)

No.	Item No.	Item name	Q'ty	Q'ty of spare parts/year	Remarks
				500	
56	4YA4023-2011G1	Head	1	9	
57	3PP4025-2871P1	Platen knob	1	3	
58	3PP4025-2896P1	Board lock	1	3	
59	3PA4025-2971G1	Tractor unit (N)	1	3	390 Elite option 391 Elite option
	3PA4025-2971G2	Tractor unit (W)	1	3	
	(Operator panel)				
71	3PP4025-3114G12	Operator panel	1	3	
72	4YA4021-1048G5	LXSP-5 printed circuit board	1	3	
	(Printed circuit board)				
81	4YA4021-1052G202	SKRA-printed circuit board	1	3	390/391 Elite For main-tenance (without ROMS)
82	4YA4021-1049G1	SRBS printed circuit board	1	3	
83	4YA4021-1050G003	LXHI printed circuit board	1	3	Option (ODG)
84	4PP4025-2887P1	Interface Lock	1	3	
85	4PP4025-2870P1	Lock post	1	3	
	(Power supply assembly)				
91	4YX4056-3477G2	Filter assembly	1	3	220/240V
92	4YB4056-8348P1	Transformer	1	3	390 220/240V
	4YB4056-8348P2	Transformer	1	3	391 220/240V
93	3YU5057-3311G1	SUII printed circuit board	1	3	

Spare parts list (5/5)

No.	Item No.	Item name	Q'ty	Q'ty of spare parts/year	Remarks
				500	
94	3YS4011-1052P1	AC cable	1	1	220V,
	3YS4011-1192P1	AC cable	1	1	Continental
	3YS4011-1103P1	AC cable	1	1	240V,British
96	4YS4011-4311P2	Connector cord	1	3	240V,Oceanian
91'	4YB4049-1457P2	Filter assembly	1	3	220/240V, only Europe (OKI-UK)
92'	4YB4049-1460P1	Transformer	1	3	390 Elite 220/240V, only Europe (OKI-UK)
	4YB4049-1460P2	Transformer	1	3	391 Elite 220/240V, only Europe (OKI-UK)
93'	4YB4049-1458P5	DC PSU board	1	3	Only Europe (OKI-UK)
94'	3YS4011-1172P1	AC cable	1	1	220V,
	3YS4011-1173P1	AC cable	1	1	Continental 240V,British